

Piping Connections PVI DigiTemp® Dual-Valve Mixing Station

1. Use reverse-return or balanced piping at the water heaters/storage tanks
2. Size common piping for no more than 6 ft/sec at maximum anticipated flow.
3. On condensing water heaters, the return line to the heaters must be connected to the dedicated return fitting.

