


UPPER 'O' SIDE CLEARANCE  
BRACKET - P/N# 33163-1

SEE NOTE

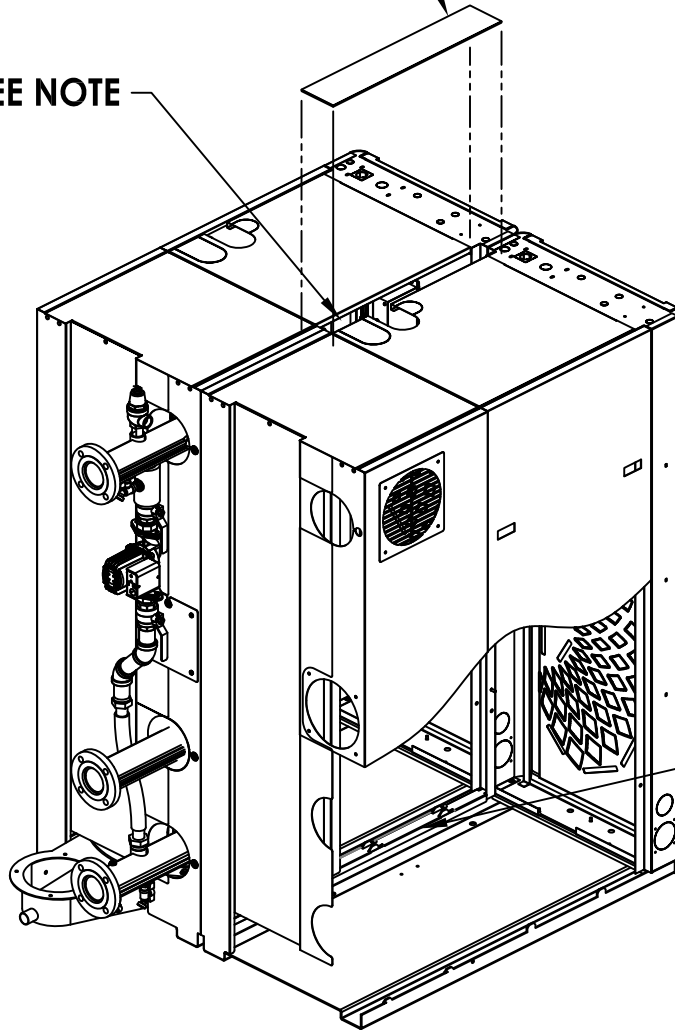

NOTE: BEFORE PLACING THE 2 UNITS SIDE-BY-SIDE  
TOGETHER, REMOVE THE SIDE PANELS IN  
BETWEEN FIRST.

LOWER 'O' SIDE CLEARANCE  
BRACKET - P/N# 33164

REAR VIEW

PARTS NOT SHOWN WERE REMOVED FOR CLARITY



PVI INDUSTRIES  
FORT WORTH, TEXAS

## ZERO SIDE CLEARANCE KIT- INSTALLATION

DWN.BY K.S. DATE 4/28/23  
SCALE NTS SIZE A  
CHKD. \_\_\_\_\_ APPD. \_\_\_\_\_  
DWN.BY \_\_\_\_\_ DATE \_\_\_\_\_

**AP-P-1091**

REV.  
**A**